SAMSUNG

Owner's Instructions

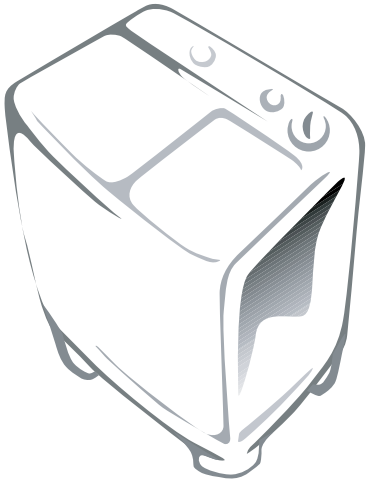

Before operating the unit, please read this manual throughly,
and retain for future reference.

BEFORE USING THE WASHER **1**
CAUTIONS **1**
PRECAUTIONS WHEN OPERATING **1**
DESCRIPTION OF PARTS **2**
CONTROL PANEL **2**
INSTALLATION **3**
ENVIRONMENT 3
HOW TO CLEAN THE FILTER 3
CONNECTING THE DRAIN HOSE 3
CLEANING THE MACHINE **3**
WASHING PROCEDURE **4**
TO WASH 4
SPIN DRY 5
RINSING 5
OVER FLOW RINSE 5
ADDITIONAL RINSE 5
LAUNDRY GUIDE **6**
MAINTENANCE **6**
TROUBLESHOOTING
SPECIFICATIONS

Register your product at
www.samsung.com/global/register
CODE NO. : DC68-02750C

BEFORE USING THE WASHER

- In case of pump drained washer, remove the cap-hose from the drain hole.

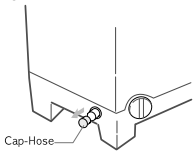

- Take out personal belongings from pockets.
  Caution, Check the pockets!
  Hairpins and coins cause damages to clothes and washing machine.
  They make noise and problems to the machine.
  Must check the pocket.



CAUTIONS

- **Be sure that the washer is grounded.**
  To avoid electrical shock,use a metal pipe for the ground connection. But, don't ground the washer with gas pipes or telephone lines to avoid to dangers of explosion or lightning strike.

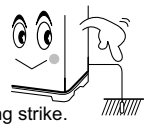

- **Do not put your hands into the spin dryer basket when it is spinning**.
  Your fingers can be caught by spinning laundry and damaged.

- **Never allow children to operate or play with the washer.**
  Children playing with the washer may accidentally fall into the washing tub.

- **Disconnect the power cord from the power supply when not in use.**
- **Ventilation opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.**
- **If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer,because special purpose tools are required.**
- **To avoid overfilling and damages this appliance must be filled with the operator present using a moderate water supply pressure only.**
- **For washing machines with ventilation openings in the base, that a carpet must not obstruct the openings.**

PRECAUTIONS WHEN OPERATING

- **Don't use excessively hot water. (50°C or more)**
  Plastic parts may be deformed or damaged. Also, clothing may be deformed or decolored.
- **Before washing,check all pockets.**
  If nails or pins remain in pockets,they may damage the washer or clothes.
- **Close the water tap a little if the water pressure is too high.**
- **To avoid water splashes, close the wash tub lid.**
- **Never splash water on the control panel.**
- **Be sure to cover with the safety cover on laundry before spinning.**
  This prevents laundry from being tossed out and damaged.



- **Be sure lay the drain hose(A) down.**

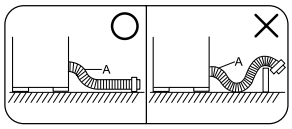

(WITHOUT PUMP)

- **Be sure place the drain hose(A) in sink or bath about 70~80cm above the ground.**

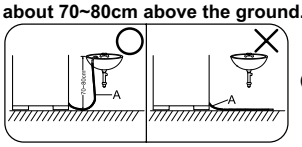

(WITH PUMP)

DESCRIPTION OF PARTS

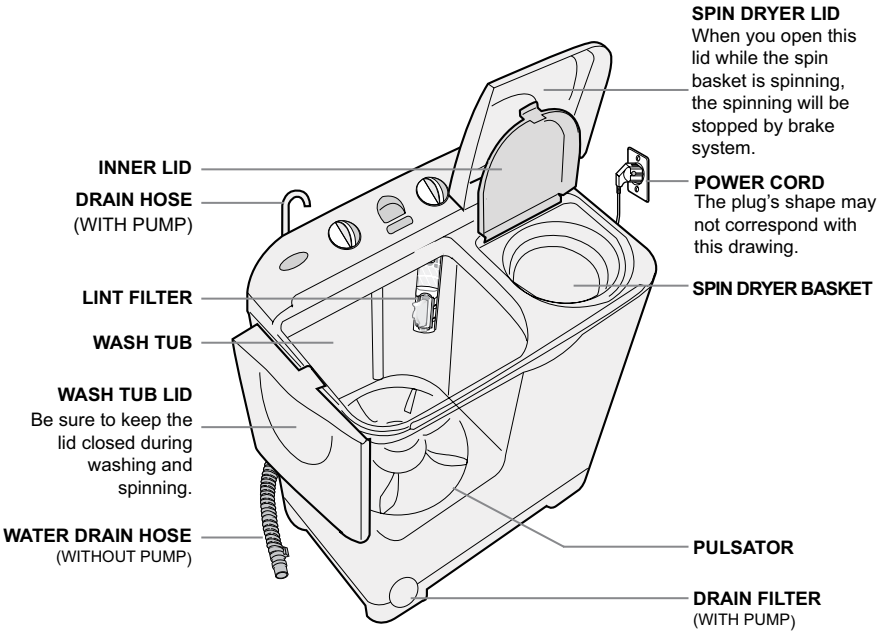
SPIN DRYER LID
When you open this lid while the spin basket is spinning, the spinning will be stopped by brake system.
POWER CORD
The plug's shape may not correspond with this drawing.
SPIN DRYER BASKET
PULSATOR
DRAIN FILTER
(WITH PUMP)
INNER LID
DRAIN HOSE
(WITH PUMP)
LINT FILTER
WASH TUB
WASH TUB LID
Be sure to keep the lid closed during washing and spinning.
WATER DRAIN HOSE
(WITHOUT PUMP)

CONTROL PANEL

1. WATER SELECTOR
This is used to select wash action.

2. WASH TIMER
This is used to set the wash time, 1-15 minutes.

3. CYCLE SELECTOR
This is used to select the Washing/Rinsing or Draining.

4. AIR TURBO SPIN TIMER
This is used to set the spin time,1-10 minutes.

5. WATER SELECTOR
During washing,WATER SELECTOR KNOB should be selected to wash.During spin rinsing, WATER SELECTOR KNOB should be selected to spin.

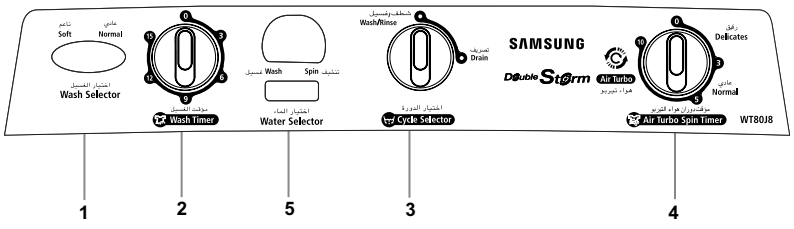

INSTALLATION

ENVIRONMENT

Leave some space
Space at last 15cm between the washer and the wall.

Place the washer on a sturdy flat surface.
If the washer is placed on an uneven or weak surface, noise or vibration may be occured. (Allowable is 2°)

Never install the washer near water.
Do not place the washer in steamy rooms or where the washer is directly exposed to rain. Moisture may destroy the electrical insulation and cause an electrical shock hazard.

Avoid direct sunlight or heating devices.
As plastic and electrical components are affected by direct heat, never place the washer near heaters, boilers,etc.
Do not place under direct sunlight.

HOW TO CLEAN THE FILTER (In case drain pump)
1. Place a rag under the washer filter not to wet the floor.
2. Rotate the filter counterclockwise and pull out the filter.
3. Remove dirts and rotate the filter clockwise until it locks in position.
Remark : Should be cleaned Filter at least 1 time a week.

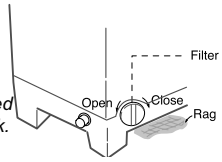

CONNECTING THE DRAIN HOSE
Insert the drain hose(a) and push it tighly to be connected as arrow direction.



Install the drain hose(A) about 70~80cm above the ground for pump model.

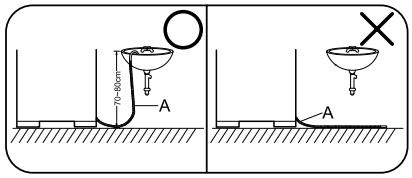

CLEANING THE MACHINE

CLEANING THE LINT FILTER
If the dregs are filled up in the lint filter after finishing the wash, push down(1) and pull it out(2) as shown in figure.
Remove the collected lint and rinse the filter net.

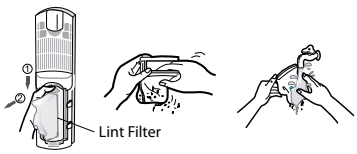

CLEANING THE WASH TUB
Wipe off strains on the cabinet and operation panel with soft cloth.
Do not use benzene, thinners, cleanser, or wax, nor scrub the washer with a brush.
Painted surfaces or plastic parts will be damaged.

OVERFLOW FILTER
Pull the upper side of the overflow filter with two fingers into the hole 'A' in the direction of arrow as shown in the figure.

CLEANING THE COVER WINDOW SPIN
1. Rotate the cover window spin clockwise and pull out.
2. Cleaning the cover window spin.
3. Insert the cover window spin back and rotate it counterclockwise until locks in positon.

Remark : Should be cleaned the cover window spin at least 1 time a month.

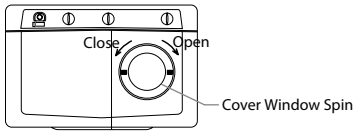

WASHING PROCEDURE

TO WASH

1. Before starting washing, check the following;
- Connect the water supply hose and open the water tap.
- Connect the power cord to the power supply outlet.
- Lay the drain hose(A) down toward a sinkhole.



(WITHOUT PUMP)

- Place the drain hose(A) in sink or bath about 70~80cm above the ground.



(WITH PUMP)

2. Set the WASH SELECTOR KNOB to the desired mode.



3. Set the CYCLE SELECTOR KNOB to 'WASH·RINSE'.
(In case no drain pump.) (**'WASH'** In case drain pump.)

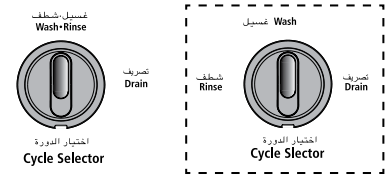

4. Set the WATER SELECTOR KNOB to WASH .

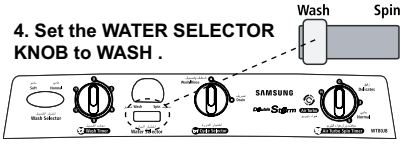

5. Load laundry in the wash tub.

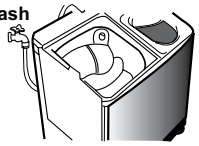

6. Fill water in the wash tub and add the detergent.

7. Set the WASH TIME 1-15 minutes.

8. After washing,set the CYCLE SELECTOR KNOB to 'DRAIN' for drain.

SPIN DRY

1. Transfer the clothes into the spin basket and arrange the clothes evenly.

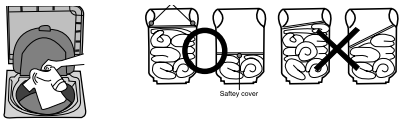

2. Be sure to attach the safety cover and close the inner lid.

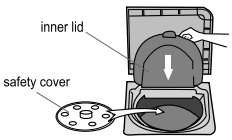

3. Close the spin dryer lid.

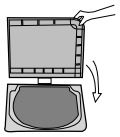

4. Set the AIR TURBO SPIN TIMER 1-10 minutes.

5. Incomplete spining.(Severe vibration or unbalance) See "When you load ..."on page 6.

RINSING

1. Set the CYCLE SELECTOR KNOB to 'WASH RINSE'.(In case no drain pump.)
('**WASH**' In case drain pump.)

(WITHOUT PUMP)

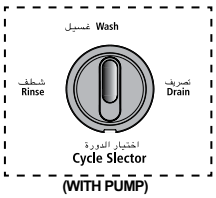

(WITH PUMP)

2. Supply the proper amount of water as not to overflow the top of the washing tub.

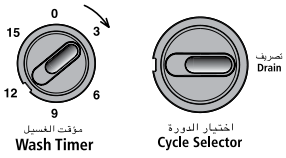

3. Set the WASH TIMER 2~3 minutes.
4. Drain the water.Set the CYCLE SELECTOR KNOB to 'DRAIN'.
5. Repeat this cycle until drain water is clean. (2~3 cycles)
6. In case no drain pump.
- Be sure lay the drain hose down.

In case drain pump.
- Be sure place the drain hose in sink or bath.

OVER FLOW RINSE

1.Keep suppling water

Adjust water pressure to ensure that the amount of water supplied does not exceed that water drained.

(WITHOUT PUMP)

(WITH PUMP)

2. Set the WASH TIMER 6~8 minutes.

3. As soon as the WASH TIMER shuts off, turn off the water tap.

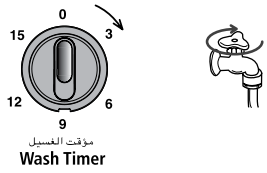

4. Set the CYCLE SELECTOR KNOB to 'DRAIN'.

ADDITIONAL RINSE

After rinsing you can select this course for more effective rinse (Don't select only this course for rinse.)

1 Load the laundry evenly into the spin basket.

2 Set the WATER SELECTOR KNOB to SPIN(a) and CYCLE SELECTOR KNOB to 'DRAIN'.(b)



3 Supply water for about 1minute. Adjust the water flow to prevent overflow from the wash tub.

1 min.



4 After stopping water supply, cover the laundry with safety cover and close the inner lid.



5 Close the spin dryer lid.

6 Set the AIR TURBO SPIN TIMER 2~3 minutes.

LAUNDRY GUIDE

WASHING TIME

KINDS OF CLOTHING	WASHING TIME	WASHING SELECTION
Extremely solid heavy fabric	10 to15minutes	NORMAL
Linen,cotton,etc.	8 to10minutes	
Ordinary clothes (underwear,etc)	7minutes	SOFT
Slightly solied synthetic fiber	2 to 5minutes	
100%wool,mixed wool knitting, thin synthetic fiber with tags indicating hand washing	2 to 5minutes	

SPIN DRY TIME

TIME	TYPE OF LAUNDRY
1 min.	Thin(synthetic fiber)
1~2 min.	wool
3~5 min.	cotton
5 min.	thick(cotton)
10 min. (Air Turbo)	thick(cotton)

DETERGENT

AMOUNT OF DETERGENT	WATER LEVEL
37 g	Low (37 l)
45 g	Mid (45 l)
54 g	High (54 l)

The amount of detergent is average.
Follow the instruction detergent printed on the package for amount of detergent.
Choose the amount of detergent depending on the fabric type.

MAINTENANCE

WHEN YOU LOAD THE LAUNDRY INTO THE SPIN BASKET.

Press the laundry evenly and put the safety cover into the spin basket drum as shown in the figure.

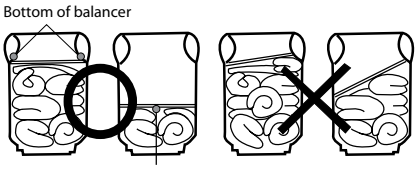

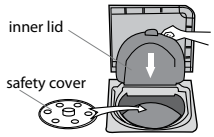

TO PICK OUT THE CLOTHING WHICH HAS FALLEN BETWEEN THE BASKET AND TUB.

For safety, pull the power supply plug out of the socket.

1. Disassemble a screws from the spin dryer hatch.
2. The spin dryer hatch is fixed to the brim by the concave and convex parts at two places. Expand the concave and convex parts, and pull up the spin dryer hatch to remove it.
3. Remove the clothing
4. Close the spin dryer hatch.
   Push in hatch firmly until the catch at the front is engaged securely.

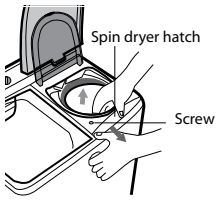

TROUBLE SHOOTING

TROUBLE	CHECK POINT	TROUBLE	CHECK POINT
1. The washer does not work.	Check that the power cord is connected to a power outlet well. Power stoppage?	**4. Water dose not drain.**	In case no drain pump. - Be sure lay the drain hose down. In case drain pump. - Be sure remove the cap-hose from the drain hole. ☛ See "Before using..." on page 1.
2. Clothes will not move freely.	Is the laundry overloaded?	**5. The spin dryer basket will not run.**	Is the spin dryer lid closed completely? Are laundry (socks,etc.) falling out of the spin dryer basket and clinging to the axle? ☛ See "To pick out..." on page 6.
3. Incomplete spinning. (Severe vibration or unbalance.)	Are the laundry arranged evenly? ☛ See "When you load..." on page 6.	**6. The water drains out immediately.**	In case no drain pump. - Is the Cycle Selector set to drain? - Is the drain hose clogged with scrap? ☛ Hang up drain hose over the drain hose hook. Half fill the wash tub with the water and try for drain again.(Scrab will be removed by water drain pressure.) In case drain pump. - Is the drain hose hung about 70~80 cm above the ground? ☛ See "Connecting the drain..." on page 3.

SPECIFICATION

DIMENSIONS (W x D x H)mm		792 x 465 x 951
WATER PRESSURE		0.05~0.78 MPa 0.5 ~ 8.0 kg·f/cm^2
WEIGHT	With out pump	29 kg
	With pump	31 kg
EXTRACTION EFFICIENCY		50 %
STANDARD QUANTITY OF WATER		54 l
MOTOR INPUT		Washing 330 W / Spinning 160 W
MOTOR MAX INPUT		480 W
RATING TIME		Washing 1 Hour / Spinning 15 minutes

Contact SAMSUNG WORLD WIDE
If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.
U.A.E
800SAMSUNG (7267864)
www.samsung.com/mea

SAMSUNG

إرشادات المالك

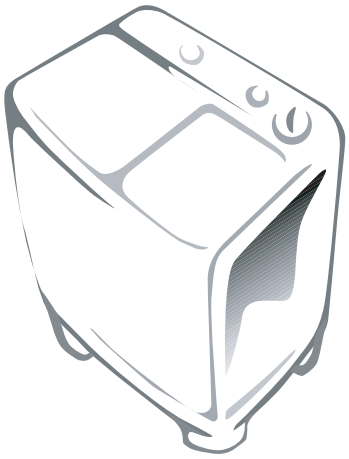

قبل تشغيل الجهاز، الرجاء قراءة هذا الدليل بالكامل والاحتفاظ به كمرجع في المستقبل.

قبل استخدام الغسالة ١
تنبيهات ١
احتياطات التشغيل ١
وصف الأجزاء ٢
لوحة التحكم ٢
التركيب ٣
البيئة ٣
كيفية غسيل المصفاة ٣
توصيل خرطوم التصريف ٣
تنظيف الغسالة ٣
إجراءات الغسيل ٤
لإجراء عملية الغسيل ٤
التجفيف ٤
الشطف ٥
شطف الماء الزائد ٥
شطف إضافي ٥
دليل الغسيل ٦
الصيانة ٦
استكشاف الأخطاء وإصلاحها
المواصفات

قم بتسجيل المنتج الخاص بك على
www.samsung.com/global/register

رقم الكود: DC68-02750C

قبل استخدام الغسالة

- في حالة استخدام غسالة مزودة بمضخة تصريف، انزع غطاء الخرطوم من فتحة التصريف.

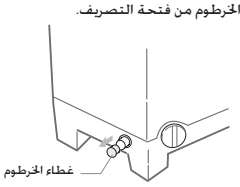

- أخرج المتعلقات الشخصية من الجيوب..

تنبيه

افحص الجيوب! تتسبب بنس الشعر والعملات المعدنية في تلف الملابس والغسالة. حيث أنها تسبب ضوضاء ومشاكل للغسالة. يجب فحص الجيوب.



تنبيهات

- **تأكد من توصيل الغسالة بطرف أرضي.**
لتجنب التعرض لصدمة كهربائية، استخدم ماسورة معدنية عند القيام بالتوصيلات الأرضية. ولكن، لا تقم بتوصيل الغسالة بطرف أرضي باستخدام أنابيب توصيل الغاز أو أسلاك الهاتف لتجنب خطر حدوث انفجار أو برق.



- **لا تضع يديك في المجفف أثناء إجراء عملية التجفيف.**
فقد تعلق أصابعك في الغسيل المجفف مما يؤدي إلى إصابتك.

- **لا تسمح أبدًا للأطفال بتشغيل الغسالة أو اللعب بها.**
فقد يسقط الأطفال أثناء لعبهم بالغسالة داخل حوض الغسيل عن طريق الخطأ.

- **افصل سلك التيار الكهربائي من مصدر التيار الكهربائي في حالة عدم استخدام الغسالة.**
- **يجب تجنب سد فتحات التهوية بواسطة السجاد عند تركيب الغسالة على أرض مغطاة بالسجاد.**
- **إذا تلف سلك التيار الكهربائي الخاص بالغسالة، يجب استبداله عن طريق مركز الصيانة الذي تحدده الشركة المصنعة حيث تتطلب عملية الصيانة استخدام أدوات خاصة.**
- **لتجنب تجاوز سعه الغسالة وتلفها، يجب أن يتم ملئها بمستوى التشغيل المحدد باستخدام ضغط متوسط لتوريد الماء.**
- **الغسالات التي تحتوي على فتحات تهوية بقاعدتها، يجب تجنب سد السجاد لهذه الفتحات.**

احتياطات التشغيل

- **لا تستخدم ماء شديد السخونة. (٥٠ درجة مئوية أو أكثر).**
فقد تتعرض الأجزاء البلاستيكية للتشوه أو التلف. كما يمكن أن تتلف الملابس أو تنعدم ألوانها.

- **قبل الغسيل، تأكد من تفريغ جميع جيوب الملابس.**
فقد يتسبب وجود مسامير أو دبابيس في الجيوب إلى تلف الغسالة أو الملابس.

- **أغلق صنبور الماء قليلا إذا كان ضغط الماء عالي جدًا.**
- **لتجنب التعرض للبلل، أغلق باب حوض الغسيل.**
- **لا تقم أبدًا برش الماء على لوحة التحكم.**

- **تأكد من وضع الغطاء الداخلي على الغسيل قبل إجراء عملية التجفيف.**
حيث يمنع ذلك خروج الغسيل من الحوض وتلفه.



- **تأكد من وضع خرطوم التصريف (أ) لأسفل.**



- **تأكد من وضع خرطوم التصريف (أ) في الحوض أو حوض الاستحمام بما يعلو ٧٠ ~ ٨٠ سم عن الأرض.**



وصف الأجزاء

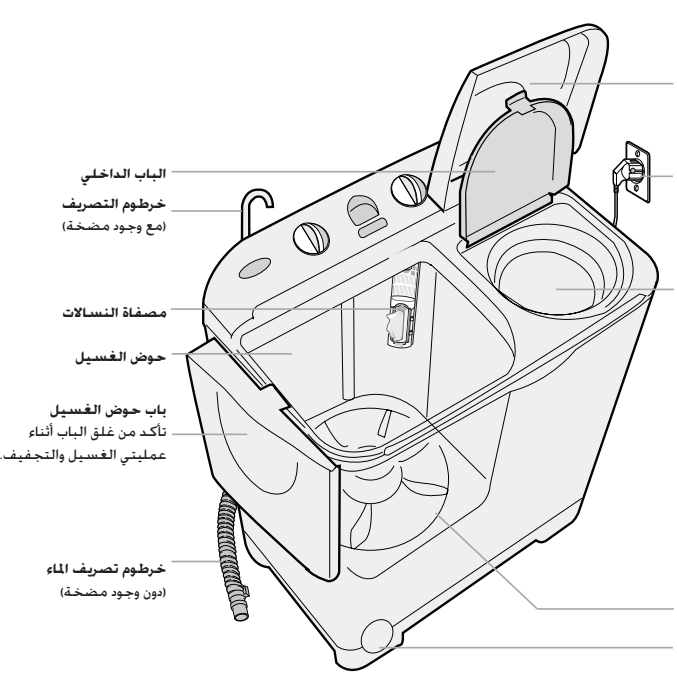

لوحة التحكم

١. **اختيار الغسيل**
يستخدم لاختيار عملية الغسيل.

٢. **مؤقت الغسيل**
يستخدم لضبط وقت الغسيل، من ١إلى ١٥ دقيقة.

٣. **اختيار الدورة**
يستخدم لاختيار عملية الغسيل أو الشطف أو التجفيف.

٤. **مؤقت التجفيف بتربينة الهواء**
يستخدم لضبط وقت التجفيف، من ١ إلى ١٠ دقائق.

٥. **اختيار الماء**
أثناء عملية الغسيل، يجب اختيار «زر اختيار الماء» للغسيل. وأثناء عملية الشطف، يجب اختيار «زر اختيار الماء» للتجفيف.

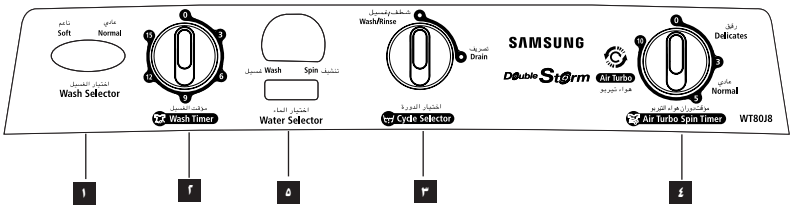

التركيب

البيئة

اترك مساحة

اترك مسافة لا تقل عن ١٥ سم بين الغسالة والحائط.

ضع الغسالة على أرض ثابتة ومستوية.

في حالة وضع الغسالة على سطح غير مستو أو ضعيف، يؤدي ذلك إلى ارتفاع صوت الغسالة أو اهتزازها أثناء التشغيل.

(المسافة المسموح بها ٢ ياردة)

لا تقم أبداً بتثبيت الغسالة بالقرب من الماء.

لا تضع الغسالة في غرف ينبعث منها البخار أو حيث تكون معرضة بشكل مباشر إلى المطر.

قد تتسبب الرطوبة في تلف المادة العازلة التي تحيط بالأسلاك الكهربائية مما ينتج عنه صدمات كهربائية.

تجنب الضوء المباشر لأشعة الشمس أو الأجهزة الحرارية.

تأثر مكونات الأسلاك الكهربائية المصنوعة من البلاستيك بالحرارة المباشرة. لا تقم أبداً بوضع الغسالة بالقرب من الأجهزة الحرارية، أو غلايات الماء، إلى آخرة.

لا تضعها تحت أشعة الشمس المباشرة.

كيفية غسيل المصفاة (في حالة وجود مضخة تصريف)

١. ضع قطعة من القماش أسفل مصفاة الغسالة حتى لا تبتل الأرض.

٢. لف المصفاة عكس عقارب الساعة وانزعها.

٣. أزل الأوساخ ولف المصفاة مرة أخرى في اتجاه عقارب الساعة لإعادتها إلى مكانها.

ملاحظة : يجب غسل المصفاة مرة واحدة على الأقل في الأسبوع.

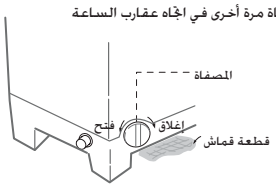

توصيل خرطوم التصريف

أدخل خرطوم التصريف (أ) وادفعه حتى يتم توصيله كما يوضح السهم.



ضع خرطوم التصريف بما يعلو عن الأرض حوالي ٧٠ إلى ٨٠ سم للطرازات التي تحتوي على مضخة.

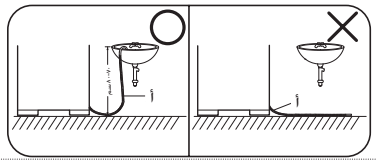

تنظيف الغسالة

تنظيف مصفاة النسالات

في حالة امتلاء مصفاة النسالات ببقايا النسالات بعد انتهاء الغسيل، ادفعها إلى الأسفل (١) ثم اسحبها للخارج كما هو موضح في الشكل (٢). أزل النسالات المتجمعة واشطف شبكة المصفاة.

تنظيف حوض الغسيل

امسح أي بقايا موجودة بالخزانة ولوحة التشغيل باستخدام قطعة قماش ناعمة.

لا تستخدم بنزين أو سوائل متطايرة أو مواد منظفة أو شمع ولا تحك الغسالة باستخدام فرشاة.

حيث يؤدي ذلك إلى تلف الأسطح المطلية والأجزاء البلاستيكية.

مصفاة الماء الزائد

اسحب الجانب العلوي من المصفاة بإصبعين إلى الفتحة (أ) في اتجاه السهم كما هو موضح في الشكل.



تنظيف الإطار المطاطي للغطاء

١. قم بتدوير الإطار المطاطي للغطاء في اتجاه عقارب الساعة واسحبه للخارج.

٢. قم بتنظيف الإطار المطاطي للغطاء.

٣. قم بإعادة تركيب الإطار المطاطي للغطاء وتدويره عكس اتجاه عقارب الساعة حتى يثبت في موضعه.

ملاحظة: يجب تنظيف الإطار المطاطي للغطاء مرة على الأقل كل شهر.

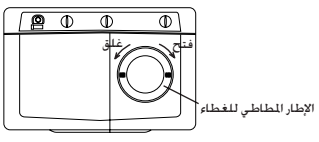

إجراءات الغسيل

لإجراء عملية الغسيل

١. **قبل بدء عملية الغسيل، تحقق مما يلي:**
- صل خرطوم توريد الماء وافتح الصنبور.
- صل سلك التيار الكهربائي بمنفذ التيار الكهربائي.
- ضع خرطوم التصريف (أ) لأسفل باتجاه الحوض.



- قم بوضع خرطوم التصريف (أ) في الحوض أو حوض الاستحمام بما يعلو ٧٠ ~ ٨٠ سم عن الأرض.



٢. **اضبط "زر اختيار الغسيل" على الوضع المطلوب.**

٣. **اضبط "زر اختيار الدورة" على "شطف•الغسيل".** (في حالة عدم وجود مضخة تصريف) ("**غسيل**" في حالة وجود مضخة تصريف)

(دون وجود مضخة)

(مع وجود المضخة)

٤. **اضبط "زر اختيار الماء" على "غسيل".**

٥. **ضع الغسيل في الحوض المخصص له.**

٦. **قم بملء حوض الغسيل بالماء وأضف المسحوق.**

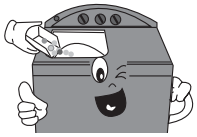

٧. **اضبط "مؤقت الغسيل" من ١ إلى ١٥ دقيقة.**

٨. **بعد الغسيل، اضبط "زر اختيار الدورة" على "تصريف" لإجراء عملية التصريف.**

التجفيف

١. **انقل الملابس إلى المجفف وقم بترتيبها على نحو متساو.**

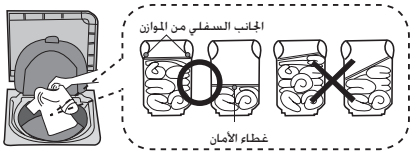

٢. **تأكد من وضع غطاء الأمان وإغلاق الباب الداخلي.**

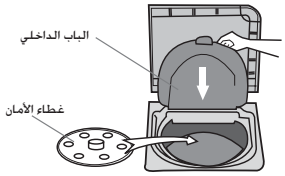

٣. **أغلق باب المجفف.**

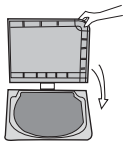

٤. **اضبط "مؤقت التجفيف بتربينة الهواء" من ١ إلى ١٠ دقائق.**

٥. **التجفيف غير مكتمل. (اهتزاز شديد أو عدم اتزان) راجع "عند وضع..." في صفحة ٦.**

الشطف

١. **اضبط "زر اختيار الدورة" على "شطف الغسيل".** (في حالة عدم وجود مضخة تصريف) («**غسيل**» في حالة وجود مضخة تصريف)

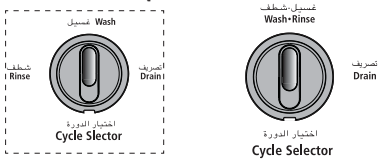

٢. **قم بتوريد كمية مناسبة من الماء بحيث لا يتدفق الماء من أعلى حوض الغسيل.**



٣. **اضبط "مؤقت الغسيل" من ٢ إلى ٣ دقائق.**

٤. **قم بتصريف الماء. اضبط "زر اختيار الدورة" على "تصريف"**

٥. **كرر هذه الدورة حتى ينتهي تصريف الماء. (من ٢ إلى ٣ دورات)**

٦. **في حالة عدم وجود مضخة تصريف.**

- تأكد من وضع خرطوم التصريف لأسفل.

في حالة وجود مضخة تصريف.

- تأكد من وضع خرطوم التصريف في الحوض أو حوض الاستحمام.

شطف الماء الزائد

١. **استمر في توريد الماء**

اضبط ضغط الماء بحيث لا تزيد كمية الماء التي تم توريدها عن الماء المُصرف.

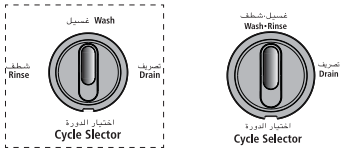

٢. **اضبط "مؤقت الغسيل" من ١ إلى ٨ دقائق.**

٣. **بمجرد توقف "مؤقت الغسيل"، أغلق صنبور الماء.**

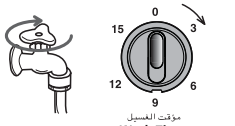

٤. **اضبط "زر اختيار الدورة" على "تصريف".**

شطف إضافي

يمكنك بعد إجراء الشطف اختيار هذه الدورة للحصول على شطف أكثر فعالية (لا تقم باختيار هذه الدورة فقط للشطف.)

١ ضع الغسيل بالتساوي في المجفف.

٢ اضبط «زر اختيار الماء» على «تجفيف» (أ) و«زر اختيار الدورة» على «تصريف» (ب).

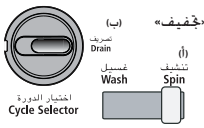

٣ قم بتوريد الماء لمدة دقيقة. اضبط معدل توريد الماء لمنع تدفقه من حوض الغسيل.

٤ بعد إيقاف توريد الماء. قم بتغطية الغسيل بغطاء الأمان وأغلق الباب الداخلي.

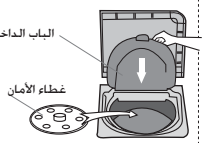

٥ أغلق باب المجفف.

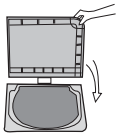

٦ اضبط «مؤقت التجفيف بتربينة الهواء» من ٢ إلى ٣ دقائق.

دليل الغسيل

وقت الغسيل

أنواع الملابس	وقت الغسيل	اختيار الغسيل
أقمشة متماسكة وثقيلة بدرجة شديدة	من ١٠ إلى ١٥ دقيقة	عادي
الكتان. القطن. إلى آخرة.	من ٨ إلى ١٠ دقائق	
ملابس عادية (الملابس الداخلية. إلى آخرة)	٧ دقائق	ناعم
أقمشة اصطناعية متماسكة قليلاً	من ٢ إلى ٥ دقائق	
١٠٠٪ صوف ممزوج. أقمشة اصطناعية رقيقة ذات علامات تدل على غسلها باليد.	من ٢ إلى ٥ دقائق	

وقت التجفيف

الوقت	نوع الغسيل
١ دقائق	رقيق (أقمشة اصطناعية)
من ١ إلى ٢ دقيقة	صوف
من ٣ إلى ٥ دقائق	قطن
٥ دقائق	سميك (قطن)
١٠ دقائق. (تربينة الهواء)	سميك (قطن)

مسحوق الغسيل

كمية المسحوق	مستوى الماء
٣٧ جرام	منخفض (٣٧ لتر)
٤٥ جرام	متوسط (٤٥ لتر)
٥٤ جرام	عالي (٥٤ لتر)

كمية مسحوق الغسيل متوسطة.

اتبع الإرشادات الخاصة بمسحوق الغسيل المطبوعة على العبوة لمعرفة كميته.

حدد كمية مسحوق الغسيل بناءًا على نوعية الأقمشة.

الصيانة

عند وضع الغسيل في المجفف.

وزع الغسيل بالتساوي وقم بوضع غطاء الأمان على حاوية المجفف كما هو موضح بالشكل.

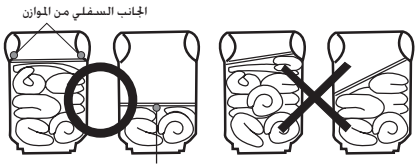

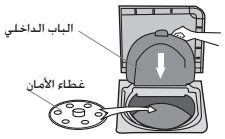

لالتقاط الملابس التي سقطت بين المجفف والحوض.

لمزيد من الأمان. افصل سلك التيار الكهربائي عن المقبس.

١. فك البراغي من باب المجفف.

٢. باب المجفف مثبت بالحافة بواسطة الأجزاء المقعرة والمحدبة في موضعين. قم بمد الأجزاء المقعرة و المحدبة واسحب باب المجفف لإزالته.

٣. قم بإزالة الملابس

٤. أغلق باب المجفف.
ادفع الباب بقوة حتى تستقر الماسكة الموجودة في مقدمته في موضعها بأمان.

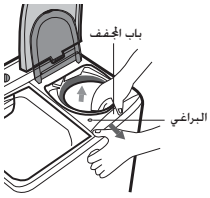

استكشاف الأخطاء وإصلاحها

المشكلة	موضع التحقق	المشكلة	موضع التحقق
١. **الغسالة لا تعمل.**	تحقق من توصيل سلك التيار الكهربائي بالمنفذ. هل انقطع التيار الكهربائي؟	٤. **لا يتم تصريف الماء.**	في حالة عدم وجود مضخة تصريف. - تأكد من وضع خرطوم التصريف لأسفل. في حالة وجود مضخة تصريف. - تأكد من إزالة غطاء الخرطوم من فتحة التصريف. ☚ راجع «قبل استخدام...» في صفحة ١.
٢. **الملابس لا تتحرك بحرية.**	هل تم وضع حمولة زائدة من الغسيل؟	٥. **المجفف لا يعمل.**	هل تم إغلاق باب المجفف بشكل كامل؟ هل يسقط الغسيل (الجوارب، إلى آخرة) خارج المجفف ويلتصق بالمحور؟ ☚ راجع «لالتقاط...» في صفحة ٦.
٣. **التجفيف غير مكتمل. (اهتزاز شديد أو عدم اتزان.)**	هل تم توزيع الغسيل بالتساوي؟ ☚ راجع «عند وضع...» في صفحة ٦.	٦. **يتم تصريف الماء في الحال.**	فيحالة عدم وجود مضخة تصريف. - هل تم ضبط «اختيار الدورة» على تصريف؟ - هل خرطوم التصريف مسدود بالنتافات؟ ☚ قم بتعليق خرطوم التصريف على الخطاف الخاص به. املأ نصف حوض الغسيل بالماء وحاول التصريف مرة أخرى. (سيتم إزالة هذه النتافات عن طريق ضغط تصريف الماء.) في حالة وجود مضخة تصريف. - هل تم تعليق خرطوم التصريف بما يعلو ٧٠ ~ ٨٠ سم عن الأرض؟ ☚ راجع «توصيل خرطوم...» في صفحة ٣.

المواصفات

الأبعاد (العرض × العمق × الارتفاع) مم		٧٩٢ × ٤٦٥ × ٩٥١
ضغط الماء		من ٠,٠٥ إلى ٠,٧٨ ميغاباسكال من ٠,٥ إلى ٨,٠ كجم-قوة/سم٢
الوزن	دون وجود المضخة	٢٩ كجم
	مع وجود المضخة	٣١ كجم
فعالية الاستخلاص		٥٠ ٪
الكمية القياسية للماء		٥٤ لتر
إدخال الموتور		الغسيل ٣٣٠ وات / التجفيف ١٦٠ وات
أقصى إدخال للموتور		٤٨٠ وات
الوقت المقدر		الغسيل ساعة واحدة / التجفيف ١٥ دقيقة

اتصل بـ SAMSUNG WORLD WIDE
في حالة وجود أي استفسارات أو تعليقات حول منتجات سامسونج،
الرجاء الاتصال بمركز خدمة عملاء سامسونج.
الإمارات
800SAMSUNG (7267864)
www.samsung.com/mea